

USER MANUAL



GUARDEON.dk
— Security Systems —

- Thank you for purchasing our products.
- The products are subject to change without prior notice.
- The company is not responsible for any safety accidents caused by abnormal operation of the product.
- Please carefully read this User's Guide (in particular, precautions for safety) before using a product and follow instructions to use a product exactly.

1. Warning and caution

Make sure to follow the instructions to prevent any danger or property losses.



Warning

Death or serious injury is expected.



It indicates prohibition of contact.



It indicates prohibition disassembly.



It indicates dangerous.





It indicates that the plug should be pulled out from the socket.

<p style="text-align: right;">NO </p>	<p style="text-align: right;">NO </p>	<p style="text-align: right;">NO </p>
<p>Do not put the plug in the socket simultaneously. It may generate abnormal heat or cause a fire.</p>	<p>Do not connect to other products while in use. It may cause breakdown.</p>	<p>Do not forcibly bend the cord or put a heavy object on the product. It may cause a fire.</p>
<p style="text-align: right;">NO </p>	<p style="text-align: right;">NO </p>	<p style="text-align: right;">NO </p>
<p>Do not use water, thinner or a detergent used to wash oil products when you wash the exterior. Make sure to wash it by using a dry cloth to prevent any breakdown or electric shock.</p>	<p>Do not install the product in a humid place. It may cause an electric shock or a fire.</p>	<p>Do not forcibly pull out the cord from the socket. If the cord is damaged, it may cause a fire or an electric shock.</p>
<p style="text-align: right;">NO </p>	<p style="text-align: right;"></p>	<p style="text-align: right;"></p>
<p>Do not put the plug in the socket with a wet hand. It may cause an electric shock.</p>	<p>Do not disassemble, repair or modify the product. It may cause a fire, an electric shock or an injury due to malfunction of the product.</p>	<p>Do not use AC circuit breaker. It may cause an electric shock.</p>

2. Features

- 2 wire IP & Wi-Fi video door phone with mini NVR
- 7" HD resolution 1024*600 with touch screen
- Backlight touch button operation
- Embedded Linux operation system
- Image&video quad split
- Human detection
- Video playback
- Tuya APP control
- Full-duplex two-way audio intercom
- Room to room intercom
- Support ONVIF IP cameras
- Customize UI & Melody
- Multimedia player
- Free short messages between resident and visitor
- Support max.128G SD card|inner memory max.100pcs picture
- Lock control | Calendar |Alarm clock
- No disturb & Night mode
- Support H265 & H264

2.1 The function and name of each part

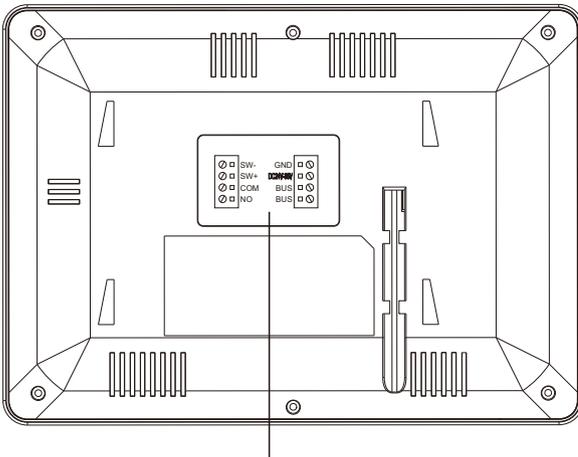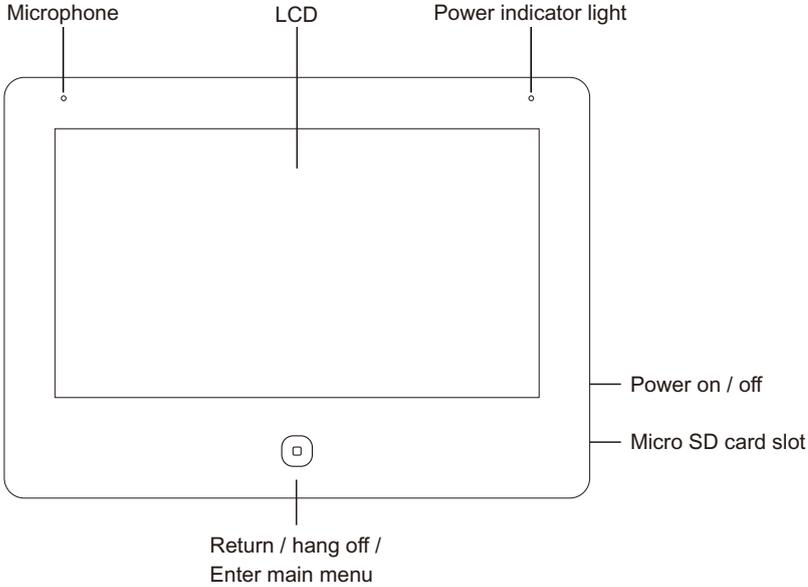

SD card insertion direction

SW+,SW-: Call button connection port
 COM,NO: Ringbell connection port
 BUS: Non-polarity

Remak: Make sure micro SD card is class 10, FAT32.

3 Indoor monitor Wi-Fi connection network

Step 1: Wi-Fi Connection for Tuya. Enter setting menu, select Wi-Fi in the network configuration interface to enter the WIFI setting interface as picture 1.

Step 2: After turning on Wi-Fi, a Wi-Fi list will pop up, click the Wi-Fi account in the list, enter the password and connect to Wi-Fi, as shown in picture 2 & 3.


Step 3: At the standby state, press  to enter system main menu, Click  to enter the interface as picture 4, then click "!" to see info and QR code

Step 4: Download Tuya app from App store or Google play


Step 5: Open Tuya app.

Step 6: Scan QR connection Tuya APP


APP : Add Device /  →  (in the upper right corner) → Scan the QR code on the monitor (like picture 4) → Done.

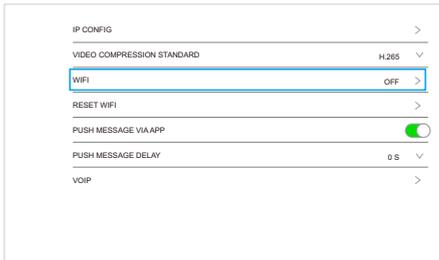

Picture 1

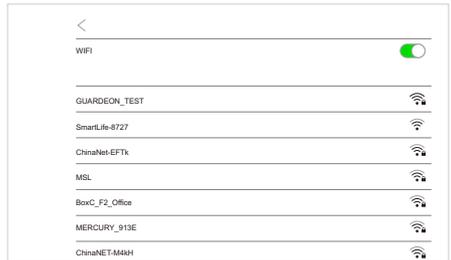

Picture 2

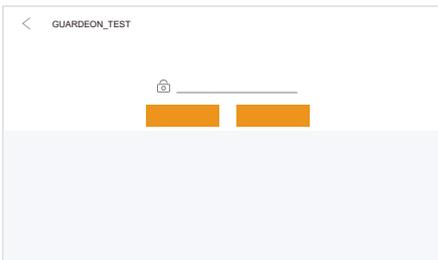

Picture 3




Picture 4

3.2 Configuring room setting

- (1) If only one panel and indoor monitor are connected, no need to set room number.
- (2) The master must be set to ROOM1, and the extensions can be set to ROOM 2/3/4... , but two indoor monitor cannot set the same number.
- (3) In same family, set same room number (the room number can be set from 1 to 9999)

Eg: Set master monitor to 101/R00M1 and slave one to 101/ROOM2.


Only the master monitor 101/ROOM1 needs to add the panel, and the slave one (101/ROOM2/3/4...) will automatically add the door panel.

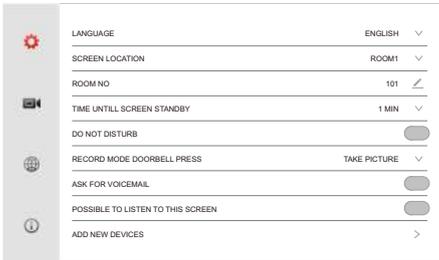

Configuration menu for Picture 1:

- LANGUAGE: ENGLISH
- SCREEN LOCATION: ROOM1
- ROOM NO: 101
- TIME UNTILL SCREEN STANDBY: 1 MN
- DO NOT DISTURB:
- RECORD MODE DOORBELL PRESS: TAKE PICTURE
- ASK FOR VOICEMAIL:
- POSSIBLE TO LISTEN TO THIS SCREEN:
- ADD NEW DEVICES: >

Picture 1

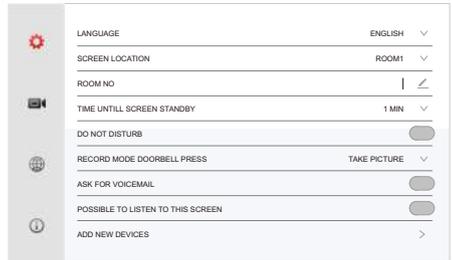

Configuration menu for Picture 2:

- LANGUAGE: ENGLISH
- SCREEN LOCATION: ROOM1
- ROOM NO: |
- TIME UNTILL SCREEN STANDBY: 1 MN
- DO NOT DISTURB:
- RECORD MODE DOORBELL PRESS: TAKE PICTURE
- ASK FOR VOICEMAIL:
- POSSIBLE TO LISTEN TO THIS SCREEN:
- ADD NEW DEVICES: >

Picture 2


3.3 Configuring IP camera

3.3.1 Automatically add IP cameras


Step 1: At the standby state, press  to enter system main menu, Click  to enter the interface as picture 1, then click "ADD NEW DEVICES" to picture.

Step 2: Click on the Camera to be added in the device list as picture 2.


Step 3: After successfully adding the device address, the device address will be showed on the right as picture 3.

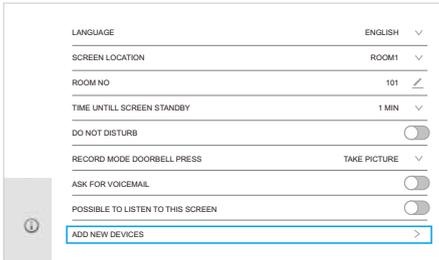

Picture 1

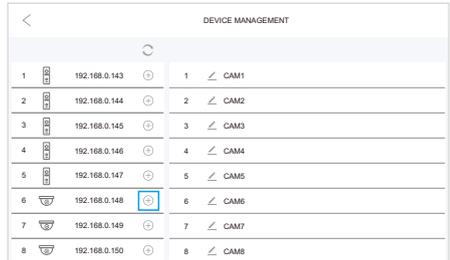


Picture 2

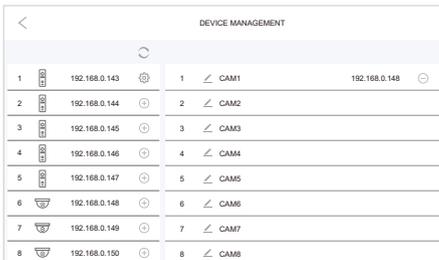

Picture 3

3.4.1 Manually add IP cameras


The operation is the same as above. After entering the device list interface, click in front of CAM1-CAM8 on the right side of the list to enter the interface where you can add the main code stream and sub code stream. After the input is completed, you can add them successfully.

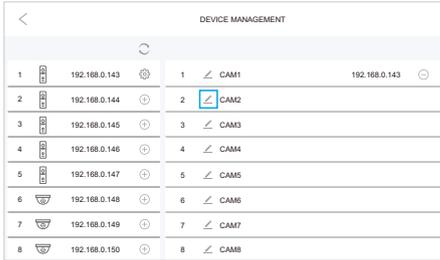

Picture 1



Picture 2

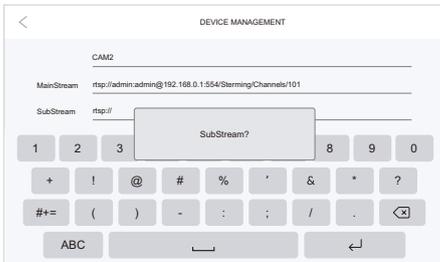

Picture 3




Picture 4


3.5 Configuring VOIP

Step 1: At the standby state, press to enter system main menu, Click to enter the interface as picture, then click "VOIP" as picture 1.

Step 2: Input the ACCOUNT / PASSWORD / SERVER, click SAVE and a SUCCESS popup will appear.

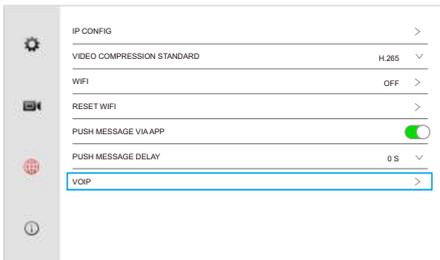

Picture 1

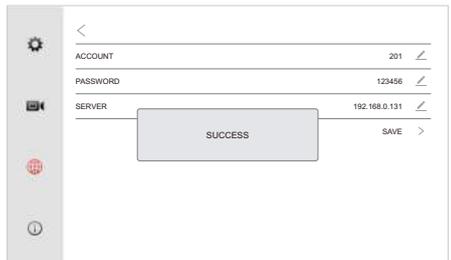

Picture 2

3.6 Configuring the door panel to NVR


Step 1: Enter the “” to enter the interface as picture 1.

Step 2: Enter the “RTSP” interface and turn on the RTSP button to enter the setting interface as picture 2, 3 & 4.


Step 3: The default password is admin123, users need to change to their own password, click CONFIRM to save.

Step 4: After turn on “RTSP”, the user can add the door panel to the NVR through the MainStream and SubStream addresses of the door panel, as shown in the picture 5.


REMARK: Unbind the door panel or resetting the panel to resume the factory default password.

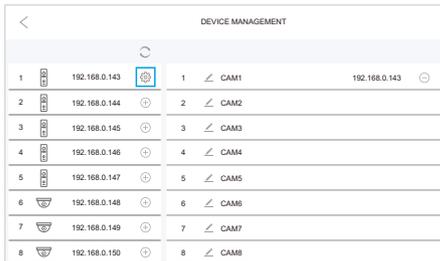

Picture 1

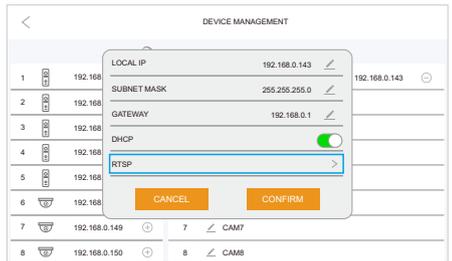

Picture 2

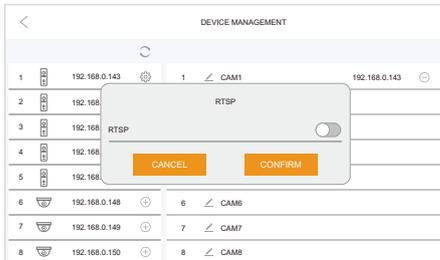

Picture 3



Picture 4




Picture 5


3.7 Modify monitor IP address

Step 1: At the system main menu, Click  to enter the system setting interface, then click  to enter the "IP CONFIG" setting.

Step 2: Turn off "DHCP", and the user can modify the IP addresses of the corresponding LAN and WLAN.

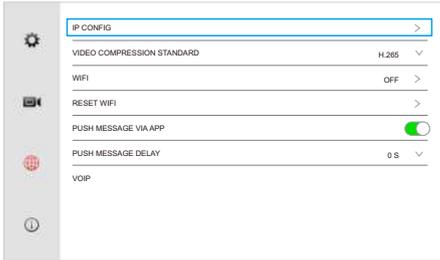

Picture 1

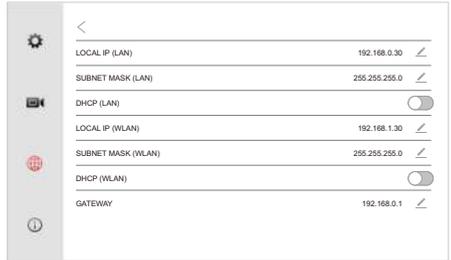


Picture 2

3.8 Modify outdoor panel address

Step 1: Enter the device management setting as picture 1.

Step 2: Turn off "DHCP", and the user can modify the IP addresses of the panel as picture 2.


REMARK: If the door panel is offline, the address cannot be changed, as shown in the picture 3.

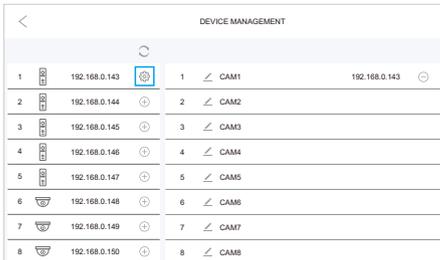

Picture 1




Picture 2

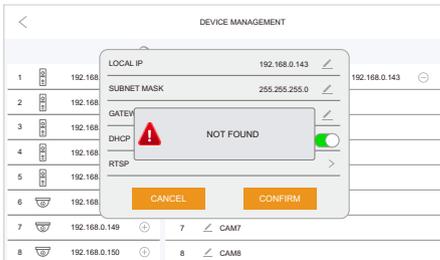


Picture 3

3.9 Unbinding the monitor

3.9.1 Remove device from the cloud.

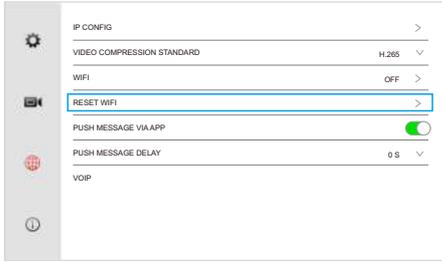

Picture 1

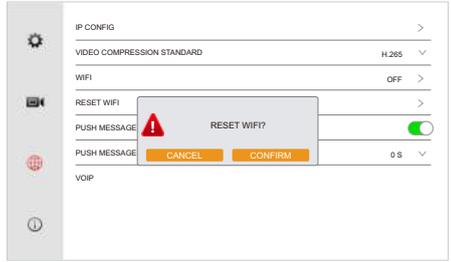


Picture 2

3.9.2 Restore factory settings

Unbind the monitor, all data will be deleted and resumed to the factory settings.



Picture 1

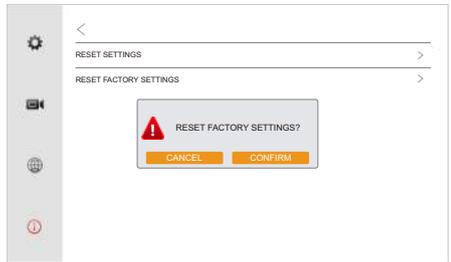

Picture 2

4. Video intercom operation

4.1 Door station call

When a visitor calls in door station, all the indoor monitors in this house will chime simultaneously as below.



Picture 1



Picture 2

The LCD will show "INCOMING CALL". Click  to talk with the visitor, as picture1. Click  to transfer the call to other monitors. The monitor will return to standby state if no one answers after chime time ends. At ringing or answering state, click  to unlock the door and the LCD will show "DOOR UNLOCKED", click  to unlock the gate and the LCD will show "GATE UNLOCKED". If there is another incoming call when talking with CAM1, the LCD will show "SOMEONE IS VISITING AT CAM2", then click  can switch the display image to CAM2 and talk with another visitor.


Note:

At the answering or intercom between monitors, click  icon, then it turn to , the microphone will be mute, and the LCD will show "MUTE", click  icon again the microphone return to normal , and the LCD show "PLEASE TALK".

4.2 Incoming call answer / Call transfer

Click  on the main interface to enter the dial keyboard interface.

- (1) Call extension monitor: Enter the extension room number directly. Call "0" means to call all extension monitors.
- (2) Call apartment resident: Enter "1+" resident's room number.

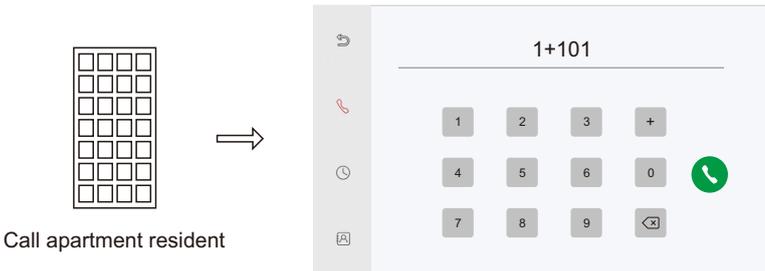

Call apartment resident

- (3) Call management center: 1 + 0 .
- (4) Call SIP/VOIP: Enter "2+" IP phone number.

Note:

When you use the standard SIP protocol, the calling number should be the phone number of the VOIP account.

4.3 Lock / Gate unlock time setting


Click  in the main menu to enter the monitoring screen. Click  to enter the setting interface, then click  in the upper right corner to set the unlocking time.




Picture 1



Picture 2

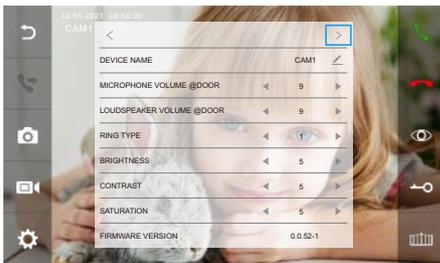

Picture 3

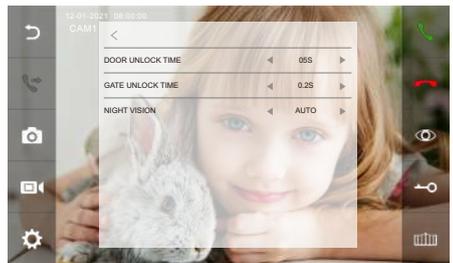


Picture 4

4.4 DVR setting

You can set up 4 DVR channels, as shown below.



DVR interface

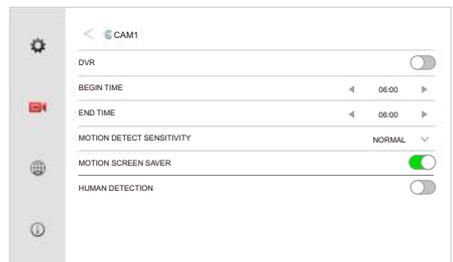

DVR 1 channel setting interface

NO.	Setting item	Selection	Note
1	DVR	ON	Activate the DVR function.
		OFF	
2	BEGIN TIME	The begin time of DVR & Motion detect.	
3	END TIME	The end time of DVR & Motion detect.	

NO.	Setting item	Selection	Note
4	MOTION DETECT SENSITIVITY	LOW / NORMAL / HIGH	Set the motion detection to LOW / NORMAL / HIGH level.
5	MOTION SCREEN SAVER	ON	The screen will be open, when a motion has detected.
		OFF	The screen will keep in standby status, when a motion has detected.
6	HUMAN DETECTION	ON	The alarm and recording function will not be triggered until the panel detect a movement of human shape.
		OFF	

Remarks: Click on the ◀ / ▶ icon to select.

Note:


- a. When motion detection is on, the system will record continuously for 1 minutes if motion has detected, the cyclic recording time is 1 minutes - 1 minutes -1 minutes.
- b. DVR function can not work when the Micro SD card less than 2G.
- c. To act DVR function well, pls use the Micro SD card with capacity of no less than 8G.
- d. When the start time and the end time are set as the same time, the DVR function will continue.

Parameters of DVR recording

SD card capacity	Resolution ratio	Frame rate
2G - 128G	1920x1080	25

4.5 Intercom video recording

After inserting the SD card and setting the RECORD MODE DOORBELL PRESS to MAKE VIDEO, when the visitor Door station call, the screen will display the recording status, and the recorded video will be stored in the inserted SD card, which can be viewed and played in the DVR, as shown in the picture below.

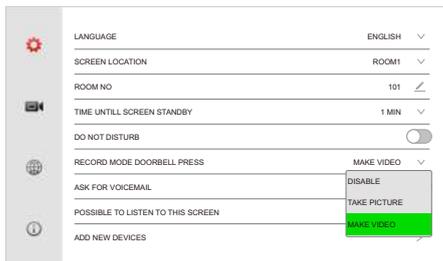


4.6 Talking volume / Ring talking volume / Ring type / Brightness / Contrast / Saturation


At the state of monitoring, ringing, talking, as the picture 1, then click  to picture 2, and click each related setting to adjust volume / ring type / brightness / contrast / saturation / door unlock time / gate unlock time.



Picture 1

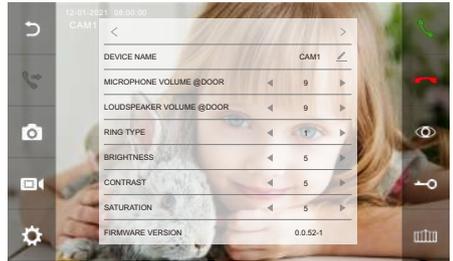


Picture 2

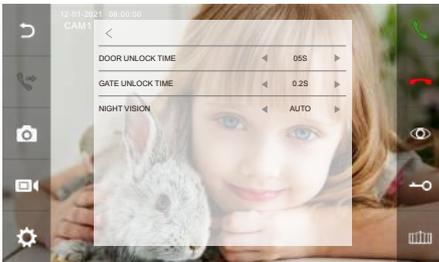

Picture 3

4.7 Ringtone setting

On the main menu, click  to enter the ringtone setting interface.

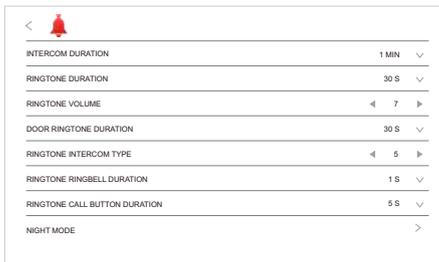

Picture 1



Picture 2

NO.	Setting item	Selection	Note
1	INTERCOM DURATION	1 - 10MIN	Communication time between monitor and outdoor panel.
2	RINGTONE DURATION	10 - 60S	Ring time when incoming call.
3	RINGTONE VOLUME	0 - 9	0 is mute, 9 is the highest volume.

NO.	Setting item	Selection	Note	
4	DOOR RINGTONE DURATION	0 - 60S	Ring time of outdoor panel when someone is calling. If the ringtone duration of the monitor is setted shorter than the door panel, then the door ringtone duration will be the same as that of the monitor.	
5	RINGTONE INTERCOM TYPE	1 - 13	Ringtones for both call button and that of callings between monitors.	
6	RINGTONE RINGBELL DURATION	0 - 9S	Ring time of ringbell when someone is calling.	
7	RINGTONE CALL BUTTON DURATION	0 - 60S	Ring time of call button after pressing it.	
8	NIGHT MODE	NIGHT MODE	ON	Open night mode.
			OFF	Close night mode.
		RINGTONE VOLUME	0 - 5	0 is mute, 5 is the highest volume.
		BEGIN TIME	Begin time of night mode.	
END TIME	End time of night mode.			

Note: Click  on the right to make a selection.

4.8 Customized ringtone

When insert the SD card into the indoor monitor, the SD card will auto set up a MYRING folder with 10 inner folders of CAM1/CAM2/CAM3/CAM4/CAM5/CAM6/CAM7/CAM8/ALARM/INTERCOM. Save a AAC file in each of the 10 folders, insert the SD card into the indoor monitor again, then the saved AAC file can be set as customized ringtone.


Remark: If the channel name is changed, the ringtone cannot be customized.

4.9 Broadcast function

This function allows you to broadcast information for all monitors in your house. At main menu state, click the  , the display will show BROADCAST REQUEST, the monitor in other rooms will show BROADCASTING . Now you can make a broadcast.

4.10 Alarm setting

On the main menu, click  to enter the alarm setting interface.

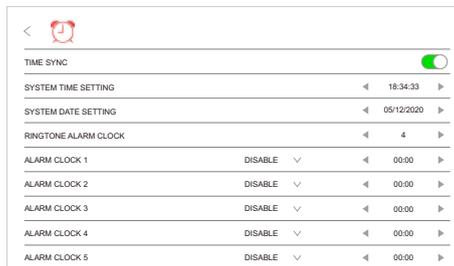

NO.	Setting item	Selection	Note
1	TIME SYNC	ON	Automatic time synchronization.
		OFF	
2	SYSTEM TIME SETTING	Hour : Minutes : seconds	
3	SYSTEM DATE SETTING	Day / Month / Year	
4	ALARM CLOCK	DISABLE	Alarm clock is not working
		ALWAYS	Ring for 1 minute at the set time every day.
		SUN to SAT	Ring for 1 minute at a specific set time

Remarks: You can click  to select the set working day.

4.11 Monitor listening

At main menu state, click  to start the monitor function. If you have more than 2 indoor monitors, there would be option listening rooms for choosing on screen, click the target indoor intercom to do monitor listening.

Note:

- When monitoring, the user can hear the sound from the being monitored room, but the people at the be-monitored intercom room can not hear the voice from monitoring intercom room.
- When there are more than 2 monitors in the system, monitor listening function is available only when Monitor listening function is turn on. Please check the system setting menu to see how to turn on the monitor listening function.

4.12 Auto leaving message

4.12.1 Auto system leaving message

This function let your visitors to leave audio message for you while nobody is at home. You should activate ASK FOR VOICEMAIL function in the SYSTEM SETTINGS before leaving home. When the visitor presses call button on the door panel and the chime time ends, visitor can hear a voice "Hello, no one is at home at this moment, please leave a message after the tone" from the doorpanel and have 20 seconds to leave a message for you.

4.12.2 Auto manual leaving message

You can record audio message manually. Click  on the main menu, select an audio file in any folder you want to set, click  at the right top of the page, to enter CONFIG ATTENTION TONE menu as picture 1 & 2.



Picture 1



Picture 2

Click  to set the tone type to user tone and play type to start tone. You can also adjust the volume of the note. After completing the above operation, click confirm to set the same operation setting end tone.

4.13 Customized background

Please insert a SD card into the monitor, the SD card will be auto set up a Skin folder. Save a JPG file with a resolution less than 1920x1080 into the folder. Insert the SD card to the monitor again, click the skin icon to switch to different skin picture in cycle, can switch to user's custom skin.

4.14 Restore settings

On the system setting menu, click  to enter the device information interface, then click RESET.


(1) When you select RESET SETTINGS, This will delete the data from your monitor, including system settings such as: Ring Tone, Alarm Clock, DVR setting, IP setting, Door setting ...

This will not be reset: room number, added devices, APP data and internal flash photos.

(2) When you select RESET FACTORY SETTINGS, This will delete all data from your monitor.



Picture 1

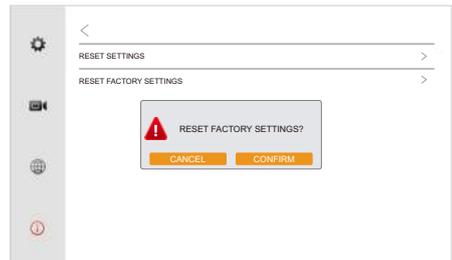

Picture 2